
 
 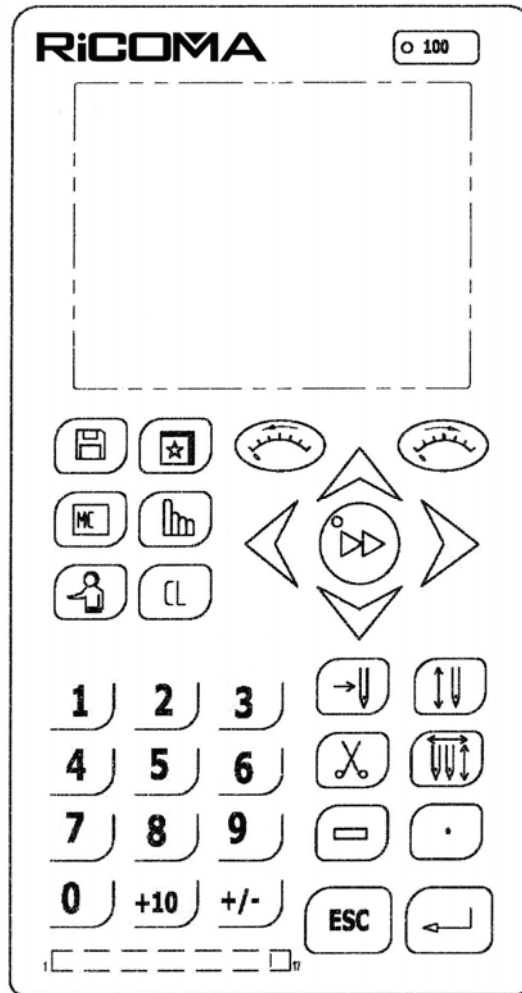



 



Quick Start Menu




Set embroidery light must be off. To relieve embroidery, press  and then 



Press  to load a design from machine library or  to load a design from disk

To enter color sequence, press  then choose #9 from the menu and press 

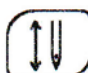Press  and choose menu item #5. Push green start button to trace design


Set embroidery by pressing  and the red light should turn on

Push green start button to start sewing.




Use  and  to increase or decrease sewing speed. (Also Page up/down)


This solution guide is ment to give you a quick reference to most common errors on the machines. If the error persists after performing the procedure, you may need to contact your technician for further assistance.

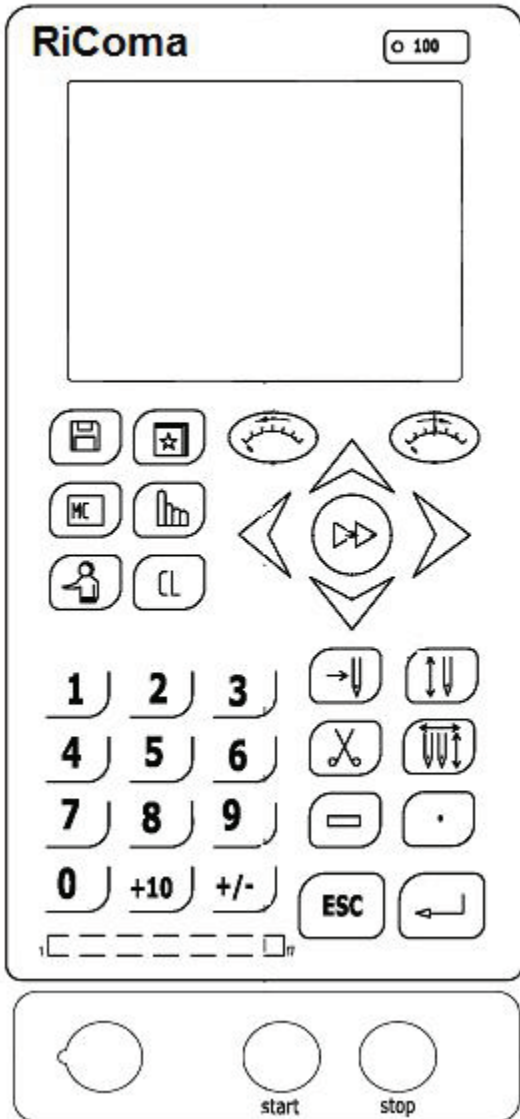
Loading a Design from Disk




To load a design :

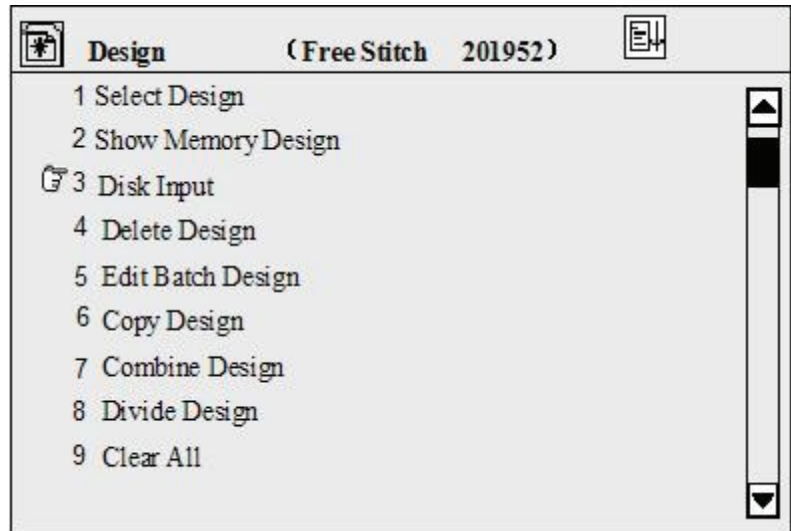


1. Push the  design key.
2. Scroll using  and  to Disk Input or press 3

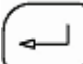

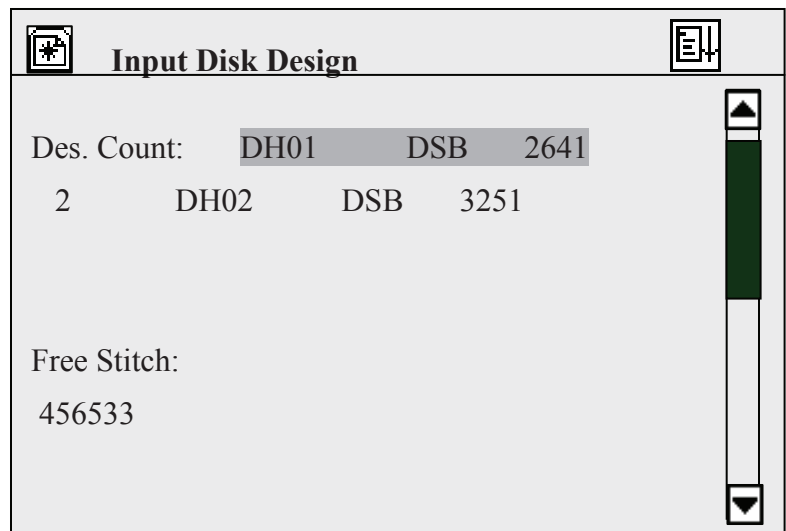3. Press the  enter key



The machine will read the disk
And display a directory.

4. Scroll using  and  to select your design from the directory
press 

This solution guide is ment to give you a quick reference to most common errors on the machines. If the error persists after performing the procedure, you may need to contact your technician for further assistance.